



71.DWB-PRO

WHEEL BALANCER

INSTRUCTION & MAINTENANCE MANUAL



Jimmy Industrial Pty Ltd
5 Cord St
Dudley Park, 5008
Ph: (08) 8269 9700
W: www.jimmytools.com.au
E: sales@jimmytools.com.au



Read this entire manual carefully and completely before installation or operation of the wheel balancer

MANUAL

1. Introduction.....	1
2. Specification and Features	1
2.1 Specification	1
2.2 Features	1
2.3 Working Environment	2
3. The Constitution of Dynamic Balancer	2
3.1 Machine	2
3.2 Electricity system	2
4. Installation of Dynamic Balancer	3
4.1 Opening and Checking	3
4.2 Installing machine	3
4.3 Installing hood	3
4.4 Installing screw stud of drive shaft	3
4.5 Installing of LCD screen	3
4.6 Installing the wheel	4
5. The meaning of the icons on the screen	4
5.1 The meaning of the interface icons	4
5.2 Main balancing page	7
5.3 Key board	8
6. ALU modes and the measurement of specific data of tire	9
6.1 Explanations of ALU modes	9
6.2 The selection of automatic ALU mode	10
6.3 The tire measurement under different ALU modes	11
7. The Balancing Operation of wheel	12
7.1 ALU-NORM mode operation process	12
7.2 ALU-S1 mode operation process	13
7.3 ALU3--ALU5 and ALU-S2 mode operation process	14
7.4 ALU-S1 and ALU-S2 laser stick	15
7.5 Dynamic balance mode (ALU6-ALU8) operation process	15
7.6 Counterweight Hide-Stick Mode	16
7.7 The OPT function	18
7.8 The Auto-Positioning function	19
8. Self-calibration	20
8.1 Enter the self-calibration interface	20
8.2 The self-calibrating of the machine	20
8.3 Calibration of rim distance scale	21
8.4 Calibration of diameter scale	21
8.5 Calibration of width scale	21
8.6 Laser mode parameter settings	22
8.7 Check machine settings and self-test	22
9. Machine settings	23
10. Weight unit settings	24

11. Safety protection and trouble shooting	26
11.1 Safety protection	26
11.2 Trouble shooting	26
12. Maintenance	27
12.1 The daily maintenance of non-professionals	27
12.2 The daily maintenance of professionals	27
13. Fault analysis of balancer	28
14. Power supply layout diagram	31
14.1 240 V Connection	31
15. Exploded drawings and list	32
Width measuring scale spare parts list	37
Laser Version Exploded drawings and spare parts list	38
Accessories list	39
Attach figure 1 System circuit diagram	40

1. Introduction

An imbalanced wheel will make the wheel jump and steering wobble while driving. It can baffle the driver to drive, aggrandize the cleft of combine area of steering system, damage the vibration damper and steering parts, and increase the probability of the traffic accidents. A balanced wheel will avoid all these problems.

This equipment adopts the new LSI (Large Scale Integrated circuit) to constitute the hardware system that acquires processes and calculates information at a high speed. Equipped with 17" LCD screen and self-designed software, this equipment displays the data in a more intelligent way. And this manufacturer owns the independent intellectual property rights.

Read the manual carefully before operating the equipment to ensure normal and safe operation. Dismantling or replacing the parts of equipment should be avoided. When the machine needs repairing, the customer can contact with technique service department. Before balancing, ensure the wheel fixed on the flange tightly. Operator should wear close-fitting smock to prevent from hanging up. Non-operator does not start the equipment.

No use while beyond the stated function range of manual.

2. Specification and Features

2.1 Specification

Max wheel weight: 65kg
Motor power: 240W
Power supply: 240V/50Hz
Balancing precision: $\pm 1g$
Rotating speed: 200r/min
Position accuracy: 1.5°
Cycle time: 8s
Rim diameter: 10"~24"(256mm~610mm)
Rim width: 1.5"~20"(40mm~510mm)
Noise: <70dB
Net weight: 116kg
Dimensions: 960mm×760mm×1160mm

2.2 Features

Adopt high-definition LCD screen, 3D animation interface. Intelligent LCD screen with dynamic message displaying makes all balancing mode operation visualized.

Various balancing modes can carry out counterweights to stick, clamp, or hidden stick etc.

Input data of rim automatically by measure scale.

Intelligent self-calibrating and measure scale self-labeling function.

Self fault diagnosis and protection function.

Applicable for various rims of steel structure and duralumin structure.

2.3 Working Environment

Temperature: 5~50°C

Height above sea level: ≤4000m

Humidity: ≤85%

3. The Constitution of Dynamic Balancer

Two major components of the dynamic balancer are: machine and electricity:

3.1 Machine

The part of machine consists of support, swing support and main shaft; they are together fixed on the frame.

3.2 Electricity system

1. The microcomputer system is made up of the LSI such as new high speed MCU CPU system and keyboard.
2. Automatic measure scale.
3. Testing speed and positioning system consists of gear and opto-electronic coupler.
4. Two-phase asynchronous motor supplies and control circuit.
5. Horizontal and vertical pressure sensor.
6. Hood protection.

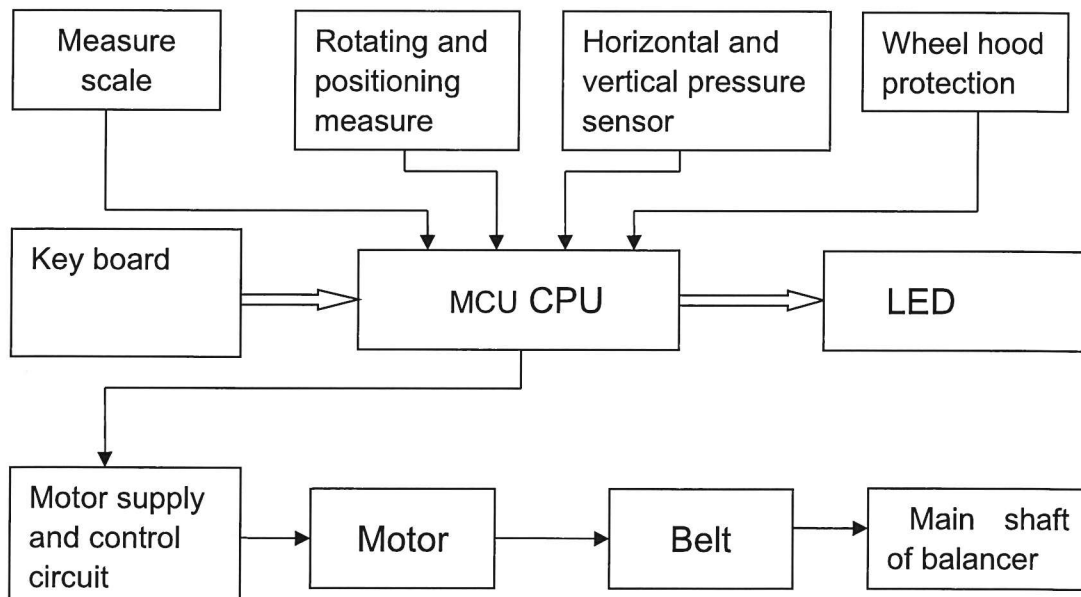


Figure 3-1

4. Installation of Dynamic Balancer

4.1 Opening and Checking

Open the package and check whether there are damaged parts. If there are some problems, please do not use the equipment and contact with the supplier. Standard accessories with equipment are shown as follow:

Screw stud of drive shaft	1
Balancing pliers	1
Allen wrench	1
Measure caliper	1
Locking nut	1
Adapter (cone)	4
Counterweight (100g)	1
Protection hood	1

4.2 Installing machine

4.2.1 The balancer must be installed on the solid cement or similar ground, unsolidified ground can bring measuring errors.

4.2.2 There should be 50cm around the balancer in order to operate conveniently.

4.2.3 Nail anchor bolts on the base's mounting hole of balancer to fix the balancer.

4.3 Installing hood

Install the frame of hood on the equipment (optional): plug the pipe of protection hood into the hood shift (behind the cabinet), then fix with M10×65 screws.

4.4 Installing screw stud of drive shaft

Install screw stud of drive shaft on the main shaft. (Refer to figure 4-1)

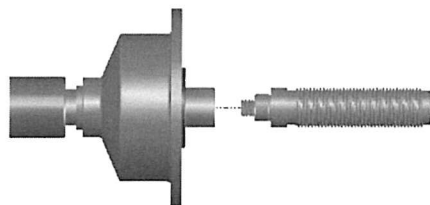


Figure 4-1

4.5 Installing of LCD screen

Install the LCD on the support with 4 M5 longer screws, and fix LCD


support onto the cover of the cabinet with 2 M5 screws; connect signal line of the LCD with VGA interface of the cabinet and screw down. Plug power output port (12V) into the LCD.

4.6 Installing the wheel

Clean the wheel clear, and no soil left, and demount the added Lead weights on the wheel, and then check whether the air pressure in the tire are conform to the stated value, and check whether the locating surface of the rim and the mounting hole are aeroelastic.



Main shaft--wheel , (Installing face of rim forward inside), Cone (tip pointing to inside)--fast clamp

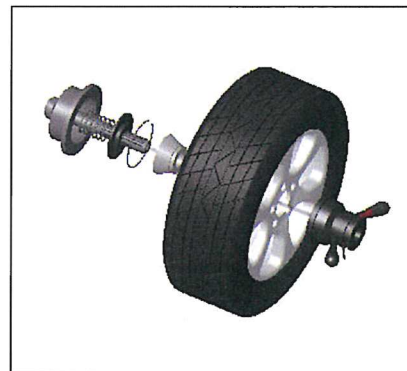


Main shaft -- spring (it has already been installed when the unite is manufactured), cone (tip point to outside) -- wheel Fast clamp


Tips: do not slip wheel on main shaft to prevent main shaft from scuffing while installing and demounting the wheel.

5. The meaning of the icons on the screen

5.1 The meaning of the interface icons


The interface page is as below,

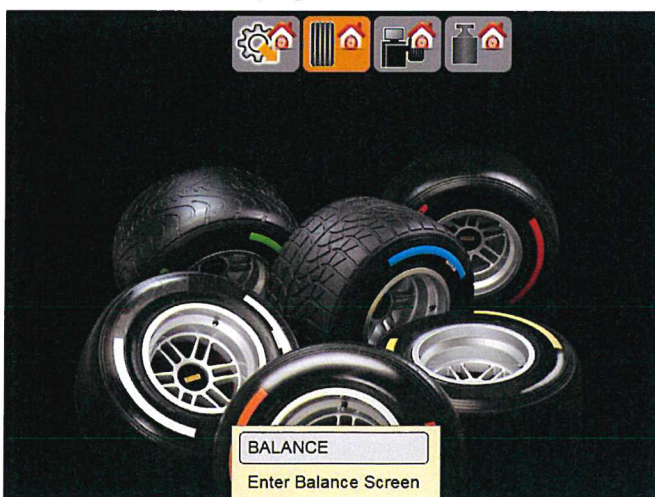


Select  : Enter main calibration page

Select  : Enter main setting page

Select  : Enter main balancing page.

Select : Enter main weight unit setting page.


Below picture shows the main the calibration page. The icons from left to right represent checking machine's technical data, self-calibration, return, calibration of distance measuring scale, calibration of diameter measuring scale and calibration of width measuring scale.

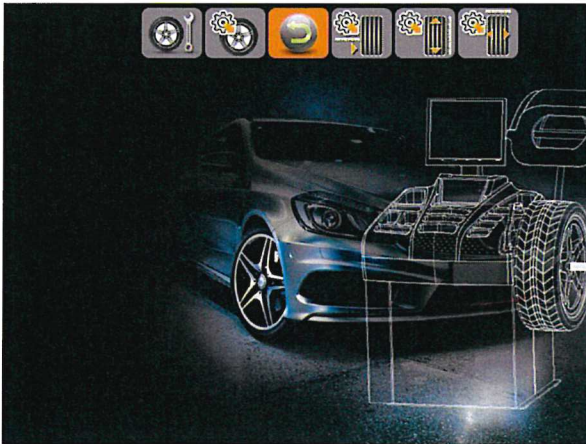


Main balancing page

Below picture shows the main balancing page. Icons from left to right represents as follow:

Help, counterweight pasting mode between S1 and S2, Optimization tips, Measurement of rim and the selection of ALU mode, balancing function, split and conceal function and return.

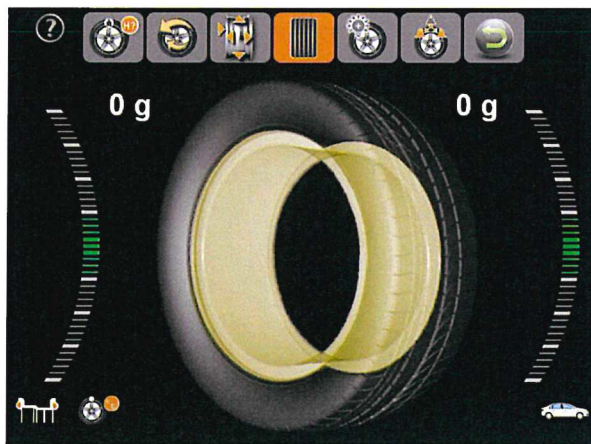

Select , then enter [ok] to the main measurement page of rim, as follow:

Main measurement page of rim


Below page shows details of rim, the icons from left to right represent: unit of measurement (mm/inch), manually input rim diameter, manually input rim width, manually input distance, return, the selection of ALU mode, the default

confirmation of ALU mode and tire type(motorcycle/ car).




Main setting page

Below page shows details of main setting page. The icons from top to bottom represent the activation function of language, disable function of sound, activate or disable the function of screen saver, activate or disable the function of automatically spin of protection hood, activate or disable the function of self-measure of distance scale and diameter scale, activate or disable the function of width scale, return and help.

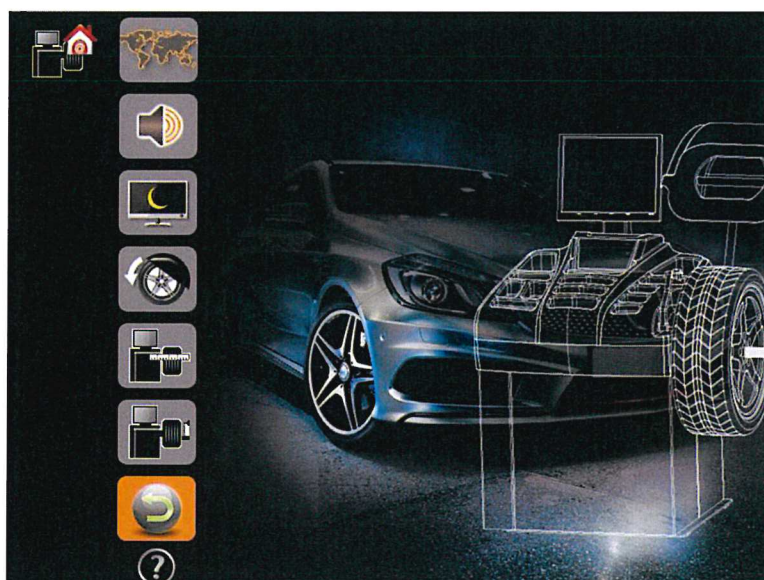

Weight unit setting page.


Below page shows details of weight unit setting page. The icons from top to bottom represent: unit of measurement (g/oz), balancing accuracy (1g/5g), the minimized value of imbalance, return and help.

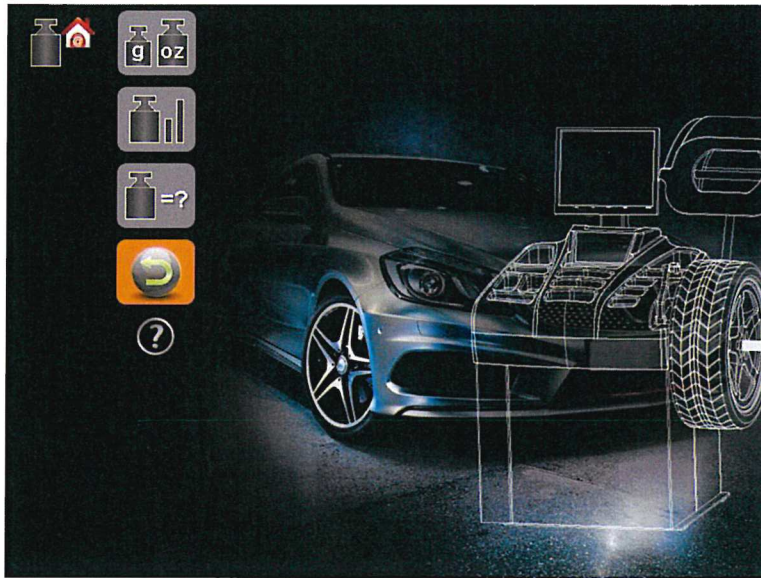

5.2 Main balancing page

Main details show as follow:

1. The value of counterweight.

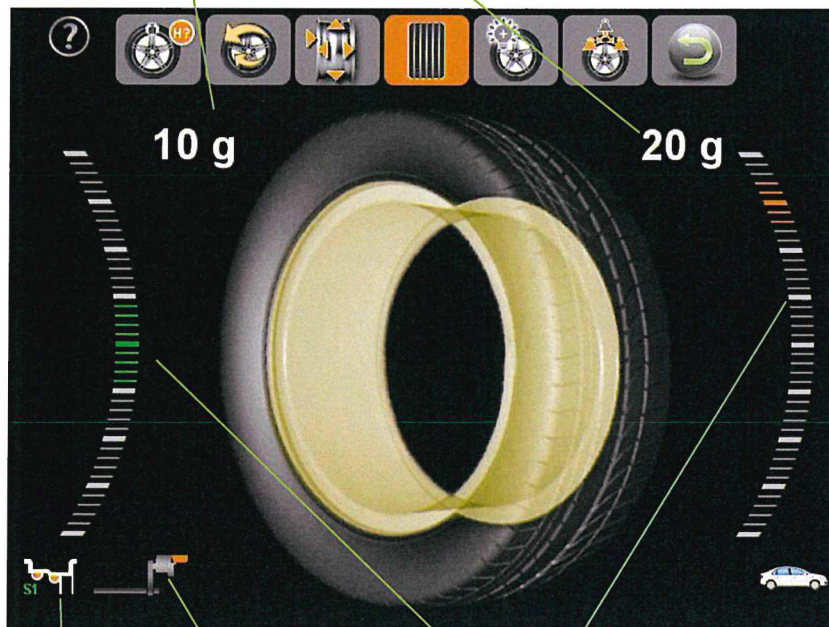

2. The indication of position of counterweight. (When the color turns from red to green, then it means we find the exact position of imbalance.)
3. Indication of how to paste counterweight only shows when we need to paste counterweights near rim inside.


(Tips: If the bar turns to green and shows this image, which means we need to paste the counterweight by using ruler. Otherwise, we just need to clip counterweight in 12 clock direction.



And there will be an image shown like this , or laser position.)

4. ALU Mode

When the user needs help during balancing, please click  for details:

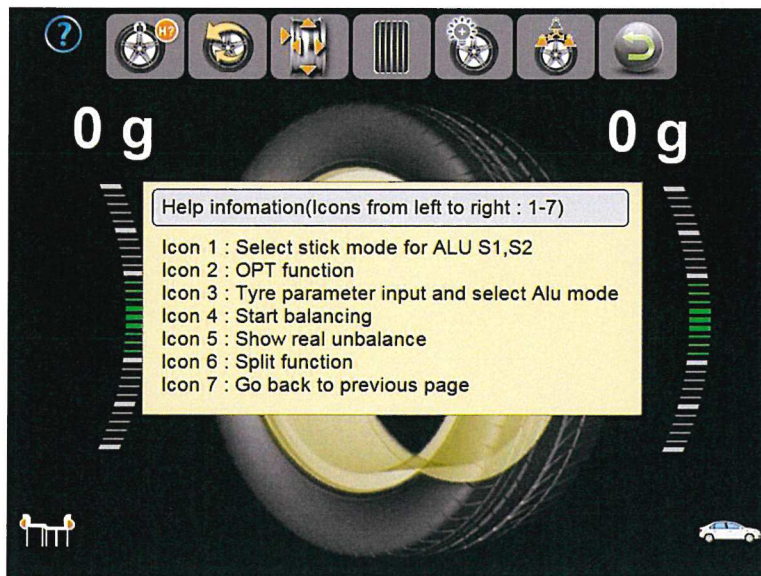

5.3 Key board

Key function:

Up down left right: up down left right

OK: confirm key


ALU: Balancing mode conversion (presses [ALU], enter the balancing mode)

Return: to quit current tack and back to the interface of inputting rim data


N.B. Only use the fingers to press push buttons. Never use the counterweight pincers or other pointed objects.


6. ALU modes and the measurement of specific data of tire


6.1 Explanations of ALU modes

Selecting  while doing balancing, then enter [ok] to the main measurement page of tire, specified as below:



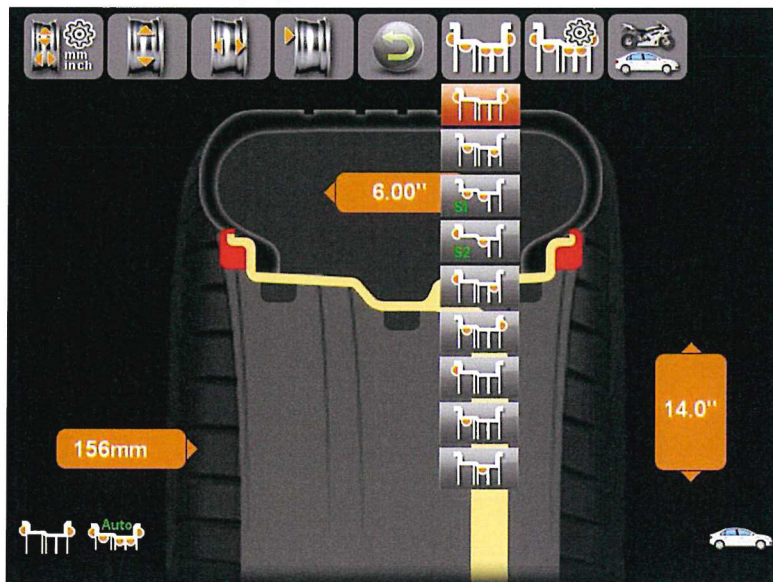

Select  in this page, to choose different ALU modes.





 ALU-NORM mode: clipping the weights on both edges of the wheel


 ALU-3 mode: sticking the weights to shoulder of rim inside and to the shoulder of rim outside


 ALU-S1 mode: sticking the weights to the left shoulder of rim inside and near to the rim spoke inside


 ALU-S2 mode: clipping the weights to the edge of rim inside and sticking the weights near to the rim spoke inside

 ALU-4 mode: clipping the weights to the edge of rim inside and sticking the weights to shoulder of rim outside


 ALU-5 mode: sticking the weights to the shoulder of rim inside and clipping the weights to the edge of rim outside


 ALU-6 mode: (static balance mode) clipping the weights on the left edge of rim outside

 ALU-7 mode: (static balance mode) sticking weights on the edges of rim inside

 ALU-8 mode: (static balance mode) sticking weights on the rim spoke inside

6.2 The selection of automatic ALU mode

Choosing  to activate or disable the automatic ALU mode.

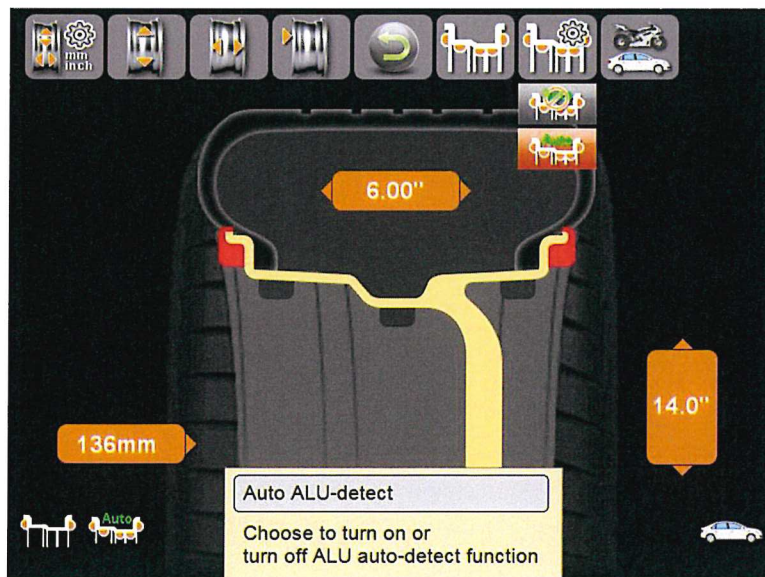



ALU automatically mode: press [ok] to activate ALU automatically mode. Under this model, the computer can identify the mode type automatically by moving scales. For customers who are get used to ALU-NORM, ALU-S1 and ALU-SA, activating this function could be more convenient. But according to different tire types, sometimes, we still need to choose ALU mode manually.



Manually choose ALU mode: press [ok] to disable the function of ALU mode automatically selection. Under this mode, user need to manually select ALU mode, then move scales for measuring.

6.3 The tire measurement under different ALU modes


User needs to input distance, rim width and rim diameter during balancing.

Distance, width and diameter are measured by scales automatically. Rotate the measure scale; pull the scale head to inside concave on the edge of the rim, then put it back. After two seconds, the distance and rim diameter will be shown on screen automatically.


Under ALU-S1,ALU-S2, after measuring distance, move the width measuring scale, pull the ruler head to the edge of the rim outside. Wait for two seconds, when the width data shows on screen automatically, we can put the width measuring scale back.

Except ALU-S1, ALU-S2, all the width data can be obtained automatically. After measuring distance, move the width scale; pull the ruler head to the front surface of unbalanced counter weight outside. Wait for two seconds, when the width data shows on screen, we can put the width measuring scale back.


The specific position of measure scale and width scale under different modes:

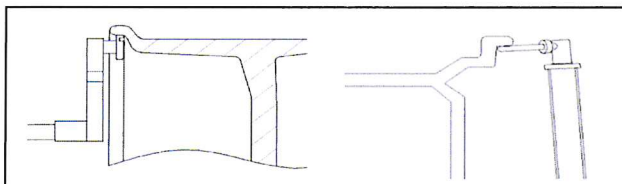

The measurement of rim excludes situations under mode ALU-S1 & ALU-S2

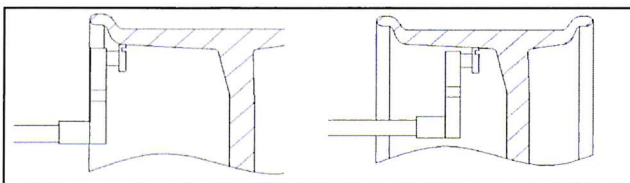

The measurement of rim under mode ALU-S1

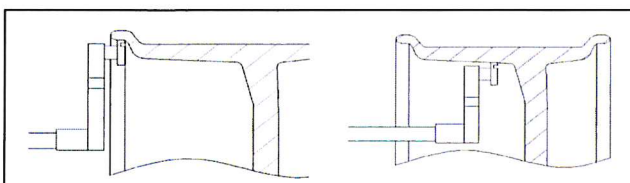


The measurement of rim under mode ALU-S2


7. The Balancing Operation of wheel

7.1 ALU-NORM mode operation process


1. Input tire data like distance, width and diameter.
2. Run the machine
3. When wheel stops spinning, the result will show in screen.

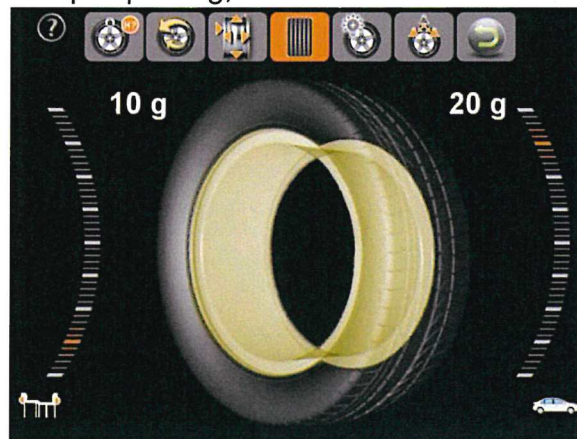

4. Manually rotate the wheel (or refer to chapter 7.8), when the inside counterweight position to green, clip the counterweight in 12 o'clock direction.

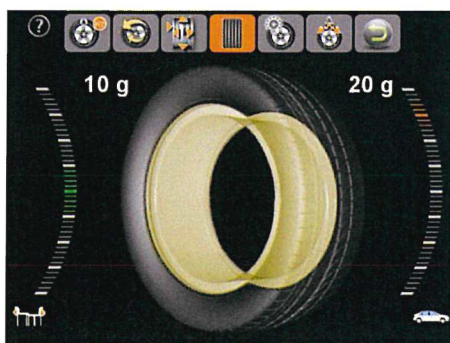


5. Manually rotate the wheel(or refer to chapter 7.8), when the outside counterweight position indicator lights turns to green, clip the counterweight in 12 o'clock direction.

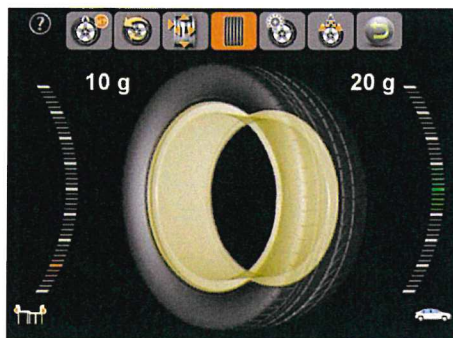


6. After clipping, run the machine again to re-test.

7.2 ALU-S1 mode operation process


1. Moving the measuring scales to get rim data.
2. Run the machine.
3. When wheel stops spinning, the result will show in screen. When the counterweight position indicator lights turns to green, then the user can stick the counterweight accordingly.

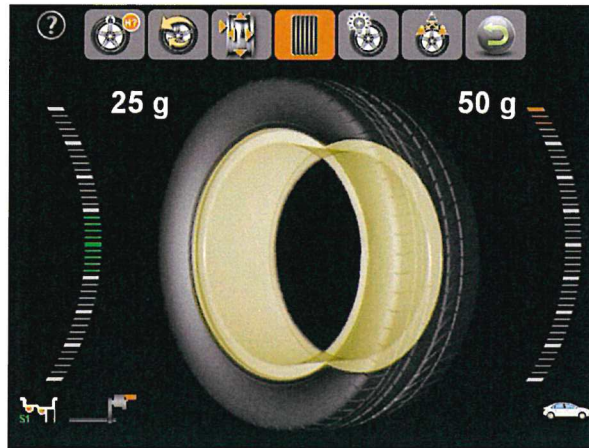


4. Tear the cover of the counterweight, clip the inside sticking weights with glue side up on the measuring ruler head. Rotate the wheel, when the inside counterweight position indicator lights on, pull out the measuring scale. When the inside counterweight position indicator lights turn to green, then stick the counterweight. There will be a bee sound when the user found the right position. After pasting, pull back the measuring scale, it will return to balancing page automatically.

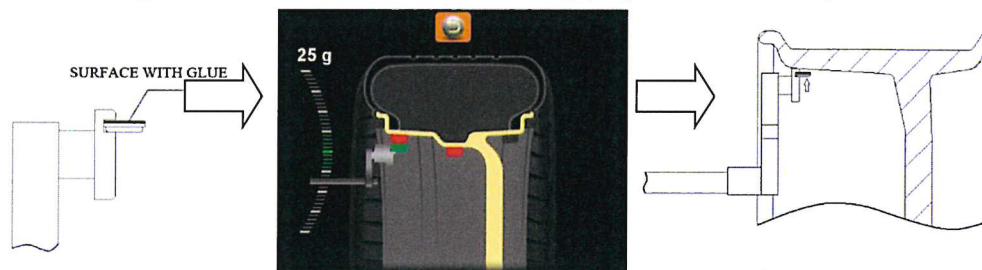

5. When doing balancing, the user must rotate the ruler to find the right position. When the right counterweight position indicator lights turn to green, and then stick the counterweight.

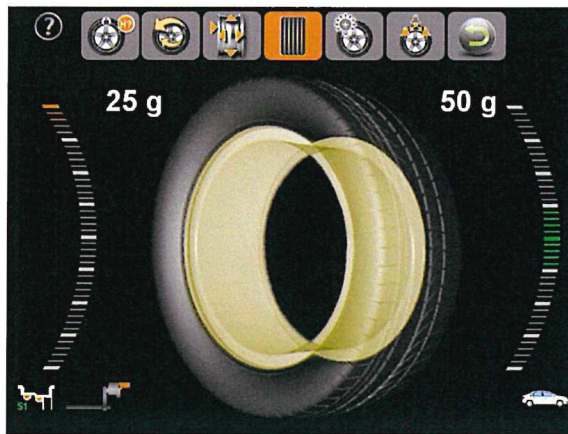

6. Follow the same process, when the outside counterweight position indicator lights turn to green, and the outside tracking sticking indicator light all on, spin the measuring scale and stick the weights on the rim.

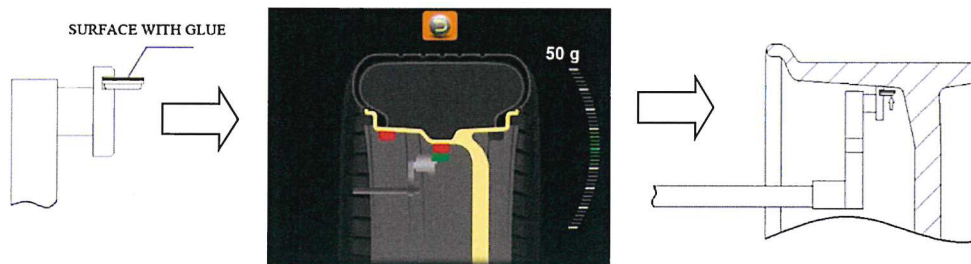


7.3 ALU3--ALU5 and ALU-S2 mode operation process

Please consult ALU-Norm and ALU-S1 mode operation.


Or get a reference from chapter 6.1 (ALU modes)

Tips: Under ALU-S1, ALU-S2, user can choose to stick counterweight by measuring scale or clip counterweight in 12 o'clock direction, specified as follow:

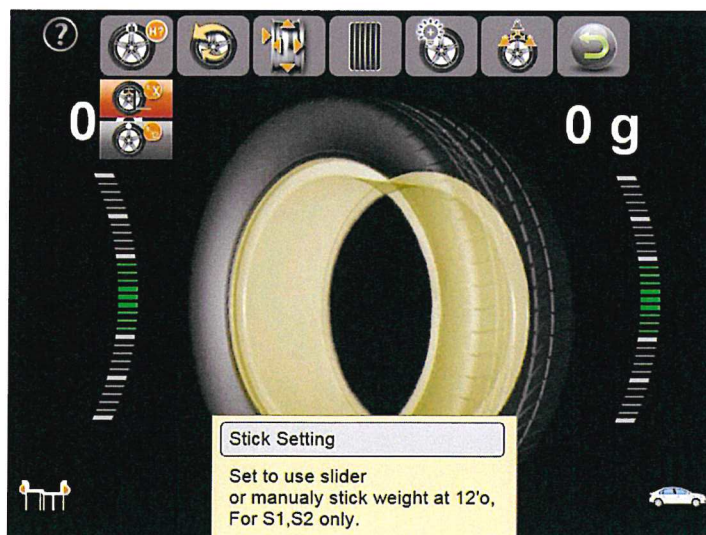

7.4 ALU-S1 and ALU-S2 laser stick


Under ALU-S1, ALU-S2, set to use slider or manually stick counterweight in 12 clock direction, or laser position(if available),shown as picture below, choose the icon marked with red.

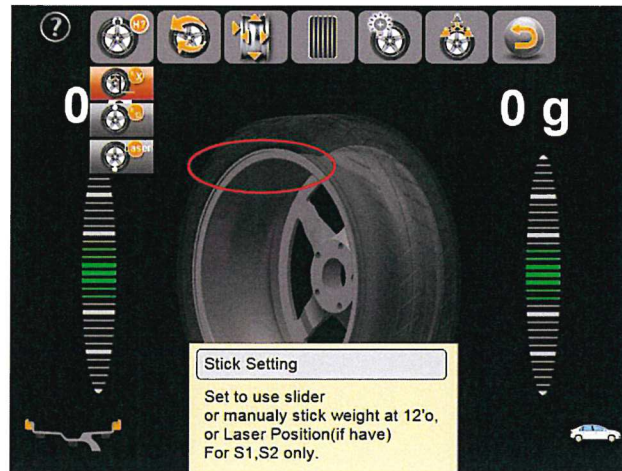


After choose laser mode, laser spot will show the place where the counterweight stick automatically when the counterweight position indicator lights turn to green. Under ALU-S1, both sides of the rim are laser position stick. Under ALU-S2, The outer side of the rim is manually stick counterweight in 12 clock direction, the inner side is laser position stick.

7.5 Dynamic balance mode (ALU6-ALU8) operation process


1. Choosing dynamic balance mode, press [ok] to switch into correspond balance mode.

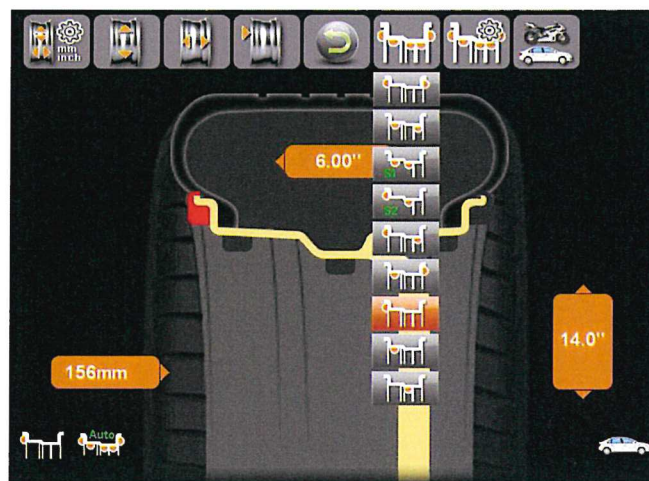

2. Measuring related rim data by scales.
3. Run the machine.
4. When wheel stops spinning, the result will show in screen.

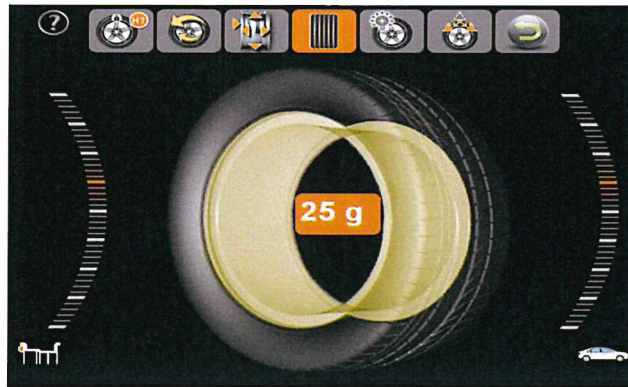


- Manually rotate rim(or refer to chapter 7.8), when the outside counterweight position indicator lights turn to green, if it is under ALU-6 mode, then clip the counterweights in 12 o'clock direction inside of rim. If it is under ALU-7 mode, then stick counterweights in 12 o'clock direction inside of rim. If it is under ALU-8 mode, then stick counterweights in 12 o'clock direction in the middle of rim.

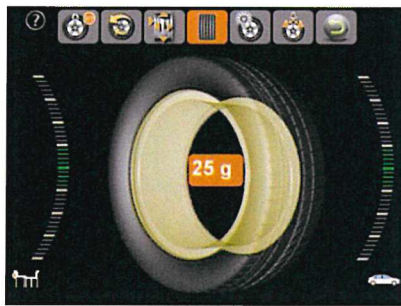

Tips: The final test results are multiples of 5g or 0.25oz.



User can press  to check the real imbalance results.

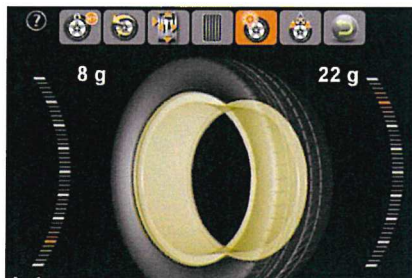

7.6 Counterweight Hide-Stick Mode




Counterweight Hide-stick function can cut imbalance position into two parts, and make these two new positions hide behind the spoke. This function can keep good aesthetic feeling of rim.

This function is only available in mode ALU-S1, ALU-S2. Below instruction under mode ALU-S1 is for customer's reference.


Under mode ALU-S1, when the final imbalance position is located in between of two rim spokes, users can use hide-stick function, steps as follow:





1. Press  to switch into correspond mode.
2. Firstly, put any spoke in 12 o'clock direction, then input spoke numbers, press [ok].





Following above steps, the two imbalanced counterweight indicators will be shown in screen.

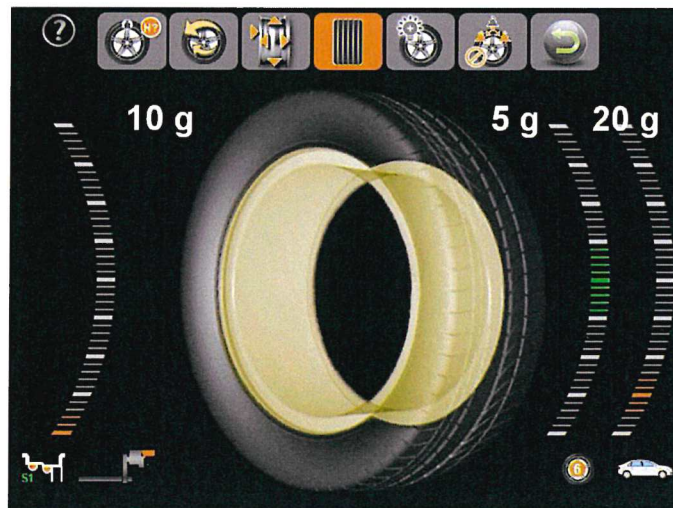

When sticking the inside counterweight, please refer to ALU-S1 counterweight pasting process. Manually rotate rim(or refer to chapter 7.8) to make this two counterweight position indicator lights turn to green, and then stick counterweights to rim by measure scales.

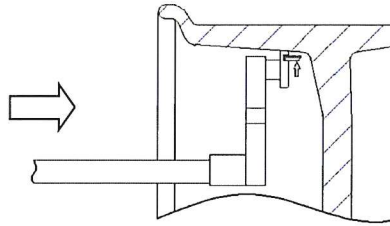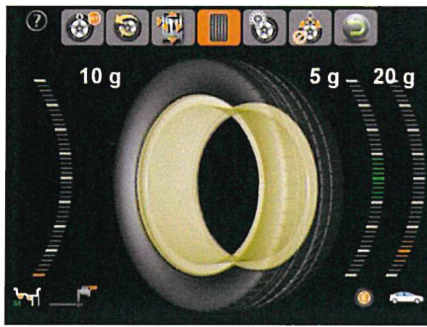


Please refer to this picture to stick 5g counterweight.

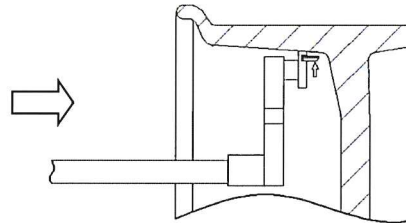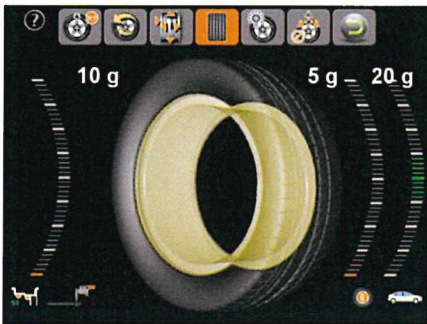

Please refer to this picture to stick 20g counterweight

7.7 The OPT function

When the wheel's static unbalance is too large (over 50g), user can choose OPT function. This can make the tire match the position of rim's static unbalance, to reduce the added unbalance block's mass.

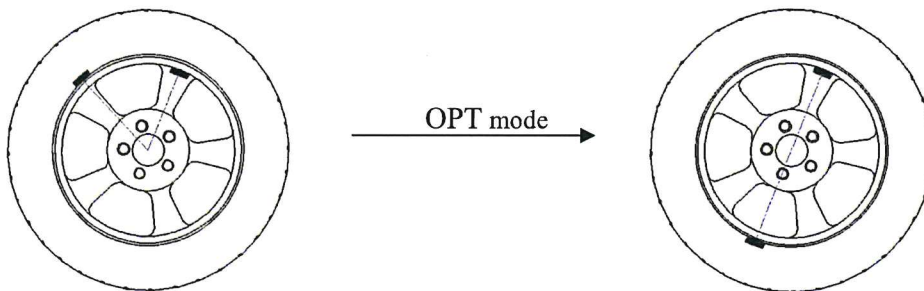

OPT operation process:

Step 1:




Choose  to switch into OPT mode.

Step 2:


Input rim data accordingly, then press [ok] to run the machine.

Step 3:

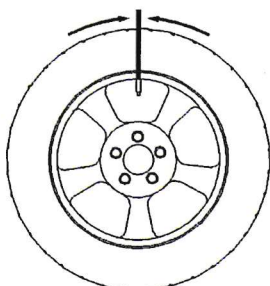

Turn the mouth of the wheel to the 12 point position, fix wheel then press [ok] for confirmation


Step 4:

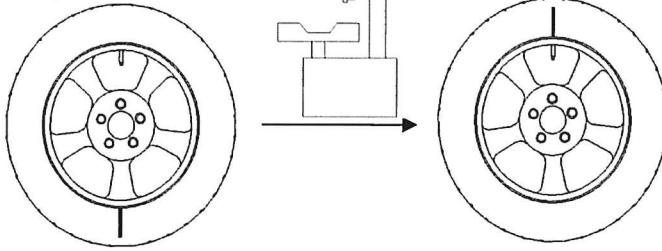

Take down the wheel, set it on the tire separating unit, and turn the related position between the tire


Step 5: Fix the rim on the wheel balancer, then press ok to run the machine.

Step 6:

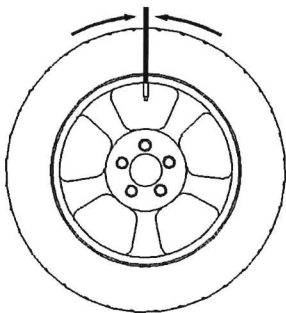

Turn the mouth of the wheel to 12 o'clock position, keep the wheel's position and confirm it by pressing OK. And the screen will show the rim's static unbalance mass, the tire's static unbalance mass, the current wheel's static unbalance mass, and the mix static unbalance mass that the wheel can reach. The user can decide to continue enhancing the wheel

Step 7:

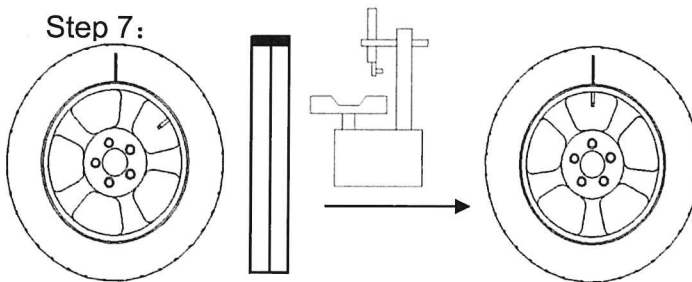

Rotate the wheel by hand, turn the balance block's position indicating piece to the top, and it turn to be red, keep the wheel's position, mark at the tire's 12 o'clock position, then take down the wheel, set it on the tire separating machine, and make the face to the air

Step 8:


Set the wheel on the wheel balancer again, run the wheel balancer by pressing [ok], and the screen will display the current wheel's static unbalance mass and the ideal mix static unbalance mass that the wheel can reach, and the word document will indicate whether the wheel's enhancing is successful or not.

7.8 The Auto-Positioning function



When doing wheel balancing, after the rotation, the screen will show information: (Auto-Positioning|Press UP). Then you can press UP key once, the equipment will automatically rotate wheel to the unbalance stick position, and lock the wheel. Use this function can easily stick the counterweight.

2. Install a well-balanced wheel between 14"-17".
3. Input the diameters of the wheel following the instruction of the ALU-NORM mode.
4. Press [OK] to start the balancer.
5. Rotate the wheel(or refer to chapter 7.8)manually after braking, when the indicator turns green , clip a 100g counterweight on 12 o'clock position inside of the rim.
6. Press [OK] to start the balancer.
7. Take the counterweight after braking and rotate the wheel manually, when the indicator turns green , clip a 100g counterweight on 12 o'clock position outside of the rim.
8. Press [OK] to start the balancer and "balance succeed" will be shown on the screen. When the motor stops totally, press [OK] to confirm and save the result.


8.3 Calibration of rim distance scale

1. Enter the main interface and press . Press [OK] to enter "distance measuring scale calibration".
2. Put back the measuring scale and press [OK] to confirm.
3. According to the prompt to move the measuring scale to "0cm", press [OK] to confirm.
4. According to the prompt to move the measuring scale to "15cm", press [OK] to confirm.

8.4 Calibration of diameter scale

1. Enter the main interface of self-calibration and press this icon , and then press [OK] to choose "diameter measuring scale calibration".
2. Install a wheel with the size of 14"-18", press  and input diameter of the wheel, pull out the measuring scale and put the head of it on the edge of the inside rim. Press [OK] to confirm.
3. Pull out the measuring scale and bring up the head of it to the main shaft of the balancer, and press [OK] to confirm.
4. Press [OK] to turn back.

8.5 Calibration of width scale

1. Enter the main interface of self-calibration and press this icon , and then press [OK] to choose "width measuring scale calibration".
2. Put the width measuring scale to the flange of the main shaft and press

[OK] to confirm.

3. Put back the width measuring scale according to the instruction and press [OK] to confirm.

4. Press [OK] to turn back.

8.6 Laser mode parameter settings


Note: Parameter setting only be needed when replace new laser assembly.

1. Firstly, choose laser mode under ALU-S1 in balancing page.
2. Enter in calibration page, choose laser parameter setting icon, press [OK] to enter this program.
3. Confirm the laser position function is opened according to the screen prompts, press [OK] to enter the next step.
4. Press Up/Down key to input parameter X according to the screen prompts, press [OK] to confirm.
5. Press Up/Down key to input parameter Y according to the screen prompts, press [OK] to confirm.
6. The laser mode parameter setting is succeed, press [OK] to return.

8.7 Check machine settings and self-test

Enter the system calibrating interface and press . Press [OK] to choose "check machine status".

This information can be provided to the franchisor when the balancer is out of order.

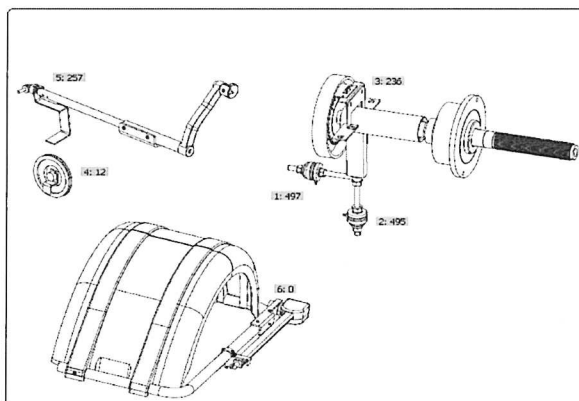

This function can be used for checking all kinds of signals and provide information for fault analysis. (Pic. above)

8.7.1 Position sensor signal check

This function can be used for checking position sensor, main shaft and main board.

Rotate the main shaft slowly and the figure of (3) will change with it. When the main shaft rotates clockwise, the figure increases; When rotating counter-clockwise, the figure decreases; when in the normal position, figure

ranges from 0 to 256.

8.7.2 Distance sensor signal check

This function can be used for checking distance sensor, main board signal processing circuit.

Move the measuring scale and the figure of (4) will change with it. The more the scale is been pulled out, the more the figure will be.

8.7.3 Diameter sensor signal check

This function can be used for checking diameter sensor, main board signal processing circuit.

Rotate the measuring scale and the figure of (5) will change with it. When rotate clockwise, the figure increases; on the contrary, the figure decreases.

8.7.4 Width sensor signal check (if any)

This function can be used for checking piezoelectric sensor, main board signal processing circuit, power supply.

Press the main shaft gently, figures on both sides of (6) change under normal condition.

8.7.5 Piezoelectric sensor signal check

This function can be used for checking piezoelectric sensor, main board signal processing circuit, power supply.

Press the main shaft gently, figures on both sides of (6) change under normal condition.

9. Machine settings

Choose this icon  in the main interface to enter this setting page:



 Language settings

 Sound on/off



Screen saver on/off




Under this function, main shaft starts rotating automatically when the protector hood is put down. With this function turns on, lay down the protection hood and press [OK] to start.




Turn on/off the automatic distance and diameter measuring scale. With this function turns off, the balancer cannot measure distance and diameter automatically and the data should be input manually.




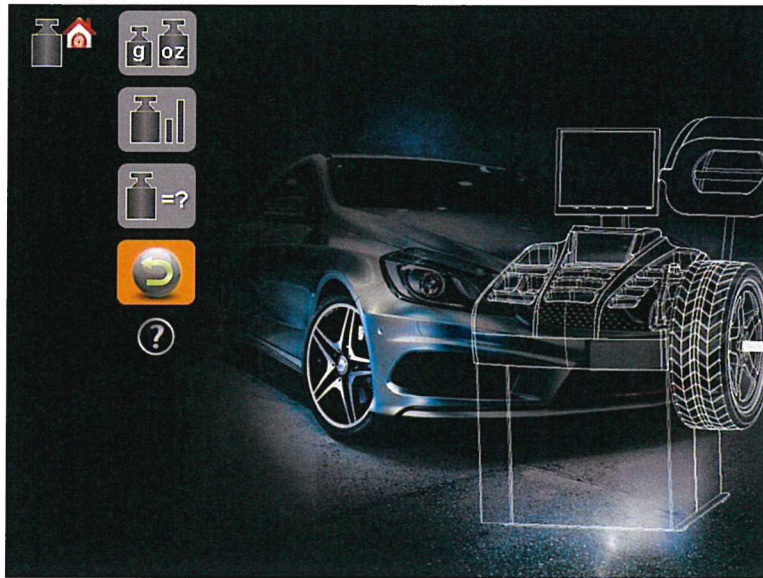
Turn on/off the automatic width measuring scale. With this function turns off, the balancer cannot measure width automatically and the data should be input manually.

Press this icon  to view the information as listed below for help:

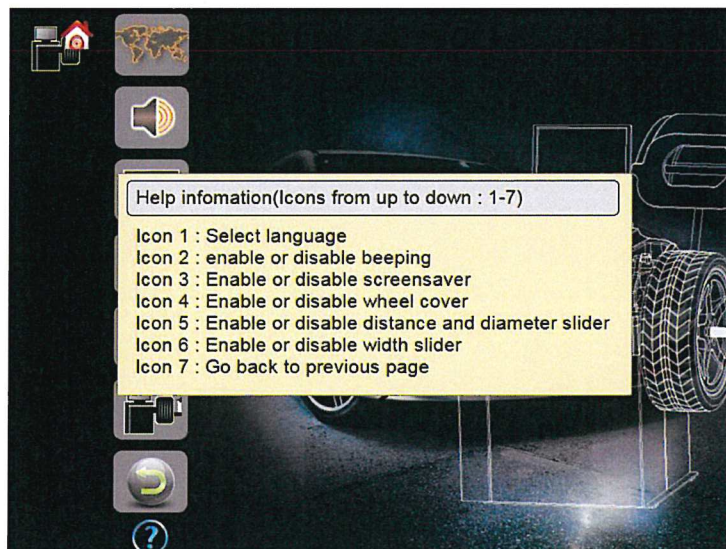

10. Weight unit settings

Press this icon  to enter the main page of weight unit settings as below:



Set "gram" or "ounce" as measurements unite




Set "1g" or "5g" as unbalance accuracy



Set minimum amount of imbalance displayed on the screen. When this amount is set, the amount which is less than this will be shown as 0 on the screen. If this amount is set as 5g, then then amount which is less than 5g will be shown as 0g. we propose to set this amount as 5g.



Press this icon to view the information as listed below for help:

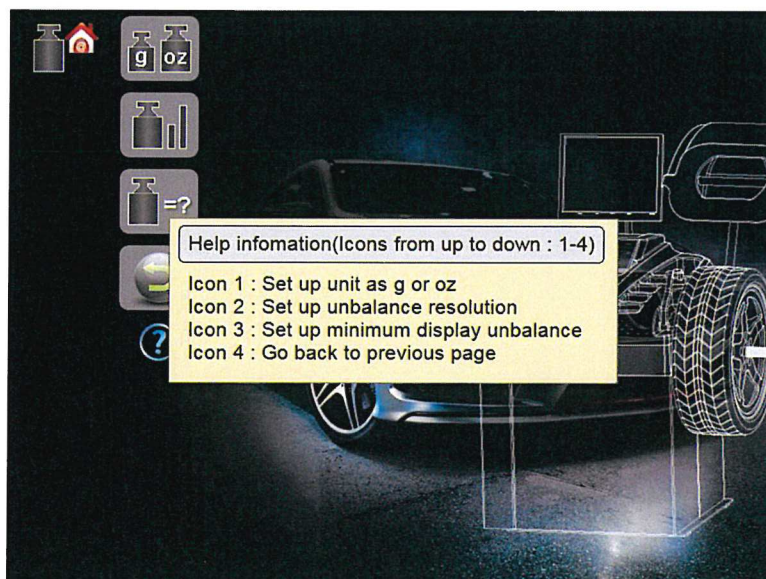

11. Safety protection and trouble shooting

11.1 Safety protection

- 11.1.1 If something unexpected happened during operation process , please press [OK] to stop the rotating wheel immediately.
- 11.1.2 If protection hood is not laid down, press [OK] to stop the rotating process.
- 11.1.3 If the protection hood is open during operation process, the rotating wheel will stop immediately.

11.2 Trouble shooting

- 11.2.1 The main shaft doesn't rotate after [OK] has been pressed. Please check the motor, power board, computer board, connecting wires, etc.
- 11.2.2 The main shaft rotates after [OK] has been pressed. Please check the position sensor, computer board, connecting wires, etc.
- 11.2.3 Main shaft rotates for a long time after the balance test ended. Please check the brake resistance, computer board, power board, connecting wires, etc.
- 11.2.4 When using the automatic rim measuring function, if the data shown on the screen is not so exact, please calibrate the measuring scale.
- 11.2.5 If the monitor doesn't work, please check power supply, power board, computer board, connecting wires, etc.
- 11.2.6 Wrong wheel installation, error of counterweight or 100g counterweight for self-calibration may cause inaccuracy. Please keep the original 100g counterweight properly for self-calibration.
- 11.2.7 Wrong wheel installation, the ground is not firm nor smooth, no earth wire may cause instability of the data and bad repetitiveness. It's better to fix the machine by using the screws.

Tips: Right method of accurately detecting:

Input right data of the wheel and do self-calibration follow the instruction. Press [OK] to start the operation and write down the data for the first time. Clip the 100g-counterweight on the outside of the wheel (in the top position that the green indicator shows). Press [OK] again, at this time the data shown on the screen and the first data in total should be 100 ± 2 . Rotate the wheel manually when the outside indicator turns green and check the 100g-counterweight. If the data is not 100g or the 100g-counterweight is not at the bottom, then the balancer is not accurate. If the date is 100g, then check inside of the wheel the same way.

12. Maintenance

12.1 The daily maintenance of non-professionals

Please switch off the power supply before the maintenance.

12.1.1 Adjust the belt tension.

12.1.1.1 Remove the protect hood.

12.1.1.2 Release the screws of the motor and move the belt until the belt in proper intention. Press the belt for 4mm.

12.1.1.3 Tighten the screws of the motor and cover the hood.

12.1.2 Check the electrical system and confirm every parts of it is well connected.

12.1.3 Check the clamping screw of the main shaft and make sure it is tight.

12.1.3.1 The locking handle should not lock the wheel to the main shaft.

12.1.3.2 Tighten the clamping screw of the main shaft by the hexagon wrench.

12.2 The daily maintenance of professionals

The maintenance of professionals can only be carried out by the professionals from the factory.

12.2.1 If the imbalance value of the wheel has obvious errors and does not improve after self-calibrate, this proves the parameter of the machine has altered, so the user should ask the professionals for help.

12.2.2 The replacement and adjustment of pressure sensor should be operated according to the following methods, and the operation should be carried out by professionals.

The steps are as follows:

① Unlash the No.1,2,3,4,5 nuts

② Remove the sensor and screw.

③ Change the No.6,7 sensing element.

④ Install the sensor and the screw according to the figure 12-1 (pay attention to the sensor's direction)

⑤ Tighten the No.1 nut emphatically.

⑥ Tighten the No.2 nut to make the main shaft and the flank of cabinet vertical, and then emphatically tighten the No.3 nut.

⑦ Tighten the No.4 nut (not too emphatically), then tighten No.5 nut.

12.2.3 The replacement of the circuit board and the components on it should be carried out by professionals.

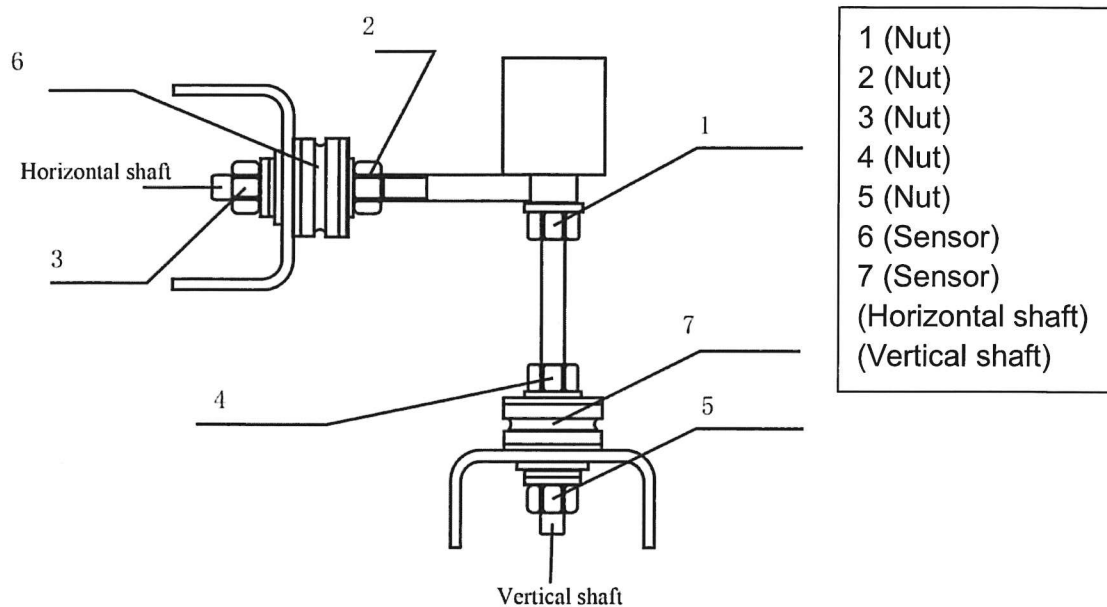


Figure 12-1

13. Fault analysis of balancer

Error code and failure mode	Cause analysis
The motor brakes urgently	1. The keyboard has been touched when dynamic balance is being operated. 2. The protection hood has been opened when dynamic balance is being operated.
The speed of the motor cannot meet needs / Speed is too low	1. The motor has been damaged. 2. The wire of motor has been damaged.
Imbalance value is beyond range	Imbalance value of the wheel is too much and beyond the calculation.
The motor rotates inversely	1. Connecting wire of the power panel is wrong. 2. Connecting wire of the motor is wrong.
Protection hood is open	1. The protection hood has been opened 2. when dynamic balance is being operated.
Protection hood is not been covered	The protection hood has been opened before dynamic balance is being operated.
Inner/outer sensor is not detected Sensor error	1. Connecting wire of sensor is wrong or damaged. 2. Piezoelectric sensor is damaged. 3. Piezoelectric sensor is not connected.
Photoelectric sensor position detection error/ Photoelectric sensor is not detected	1. Photoelectric sensor is not connected. 2. Photoelectric sensor is damaged.


Input parameter of the tyre	<ol style="list-style-type: none"> 1. Parameter of the tyre has not been measured before balance operation. 2. Tyre distance, diameter, width is zero.
Self-calibrate is failed	<ol style="list-style-type: none"> 1. Calibration procedures are wrong. 2. 100g counterweight is not been clipped.
Calibration of distance scale is failed	<ol style="list-style-type: none"> 1. Calibration procedures are wrong. 2. Potentiometer is not connected or abnormal.
Calibration of diameter scale is failed	<ol style="list-style-type: none"> 1. Calibration procedures are wrong. 2. Potentiometer is not connected or abnormal.
Calibration of width scale is failed	<ol style="list-style-type: none"> 1. Calibration procedures are wrong. 2. Potentiometer is not connected or abnormal.
Lack of information database	<ol style="list-style-type: none"> 1. Information database is lost. 2. Computer board is damaged.
The stored data is lost, the balancer needs to be tested	<ol style="list-style-type: none"> 1. Test the balancer. 2. Computer board is damaged.
The automatic scale's position is beyond the range	<ol style="list-style-type: none"> 1. The automatic scale is not in the normal range. 2. Calibrate the distance scale, diameter scale and width scale. 3. Potentiometer is not connected or damaged.
Blank display on the screen	<ol style="list-style-type: none"> 1. The power switch is damaged. 2. The wire between display and computer is not well connected. 3. The liquid crystal board is damaged. 4. The power panel is damaged.
The displayer works normally but motor doesn't work	<ol style="list-style-type: none"> 1. The protection hood is not been covered(Have a prompt on the screen). 2. 3 wires of the motor and the electric relay are not well connected. 3. Computer cannot control the electric relay. Change the computer. 4. The electric relay is damaged. Change the power panel. 5. The motor is damaged.

<p>Motor speed is very high and cannot brake</p>	<ol style="list-style-type: none"> 1. The connecting wire between the position sensor and computer board is not well connected. Please check the connecting wire. 2. Signal of the position sensor is abnormal. Please adjust the height of position sensor. (After adjustment, please rotate the wheel manually to check if the position sensor and the fluted disc is contacted, and avoid damaging the optocoupler in the position sensor). 3. The optocoupler in the position sensor is damaged. Please change a new position sensor.
<p>Displayer works well but the keyboard doesn't work. / Cannot brake in the test operation and information doesn't been shown on the screen.</p>	<p>System halted. Please restart.</p>
<p>The balancer is failed in self-calibrating and on the screen shows information about this.</p>	<ol style="list-style-type: none"> 1. Didn't clip the 100g-counterweight. 2. The connecting wire of piezoelectric sensor is broken or not well connected. 3. The sensor is damaged.
<p>Parameter of the wheel that measured by the electrical scale is obviously wrong.</p>	<ol style="list-style-type: none"> 1. Please check if the connecting wire between the scale potentiometer and the computer board is well connected. 2. The potentiometer is broken, please change a new one. 3. Please re-demarcate the electrical scale.
<p>The testing process is normal but imbalance value is obviously wrong.</p>	<ol style="list-style-type: none"> 1. Wrong input of wheel parameter. Please check it again. 2. Please use a well-balanced tyre size of which is 14"-15" to test the balancer. If error is more or less than 10% of the counterweight, please do the self-calibration.
<p>When the rotate is repeated, the result of measurement is rather changeable and more than 5g.</p>	<ol style="list-style-type: none"> 1. Foreign matter in the tyre or tyre pressure is low. 2. The adaptor or the wheel is not tight. 3. The ground is not even and main body of the balancer is waggling in the testing process. Please fix the foundation bolt. 4. If necessary, please do


	self-calibration by using the tyre size of which is 14"-15".
The result of measurement is shown as 0-0.	<ol style="list-style-type: none"> 1. The minimum displayed amount on the screen is too much. Please set it as 5g. 2. The connecting wire of piezoelectric sensor is broken or not well connected.

14. Power supply layout diagram


14.1 240 V Connection

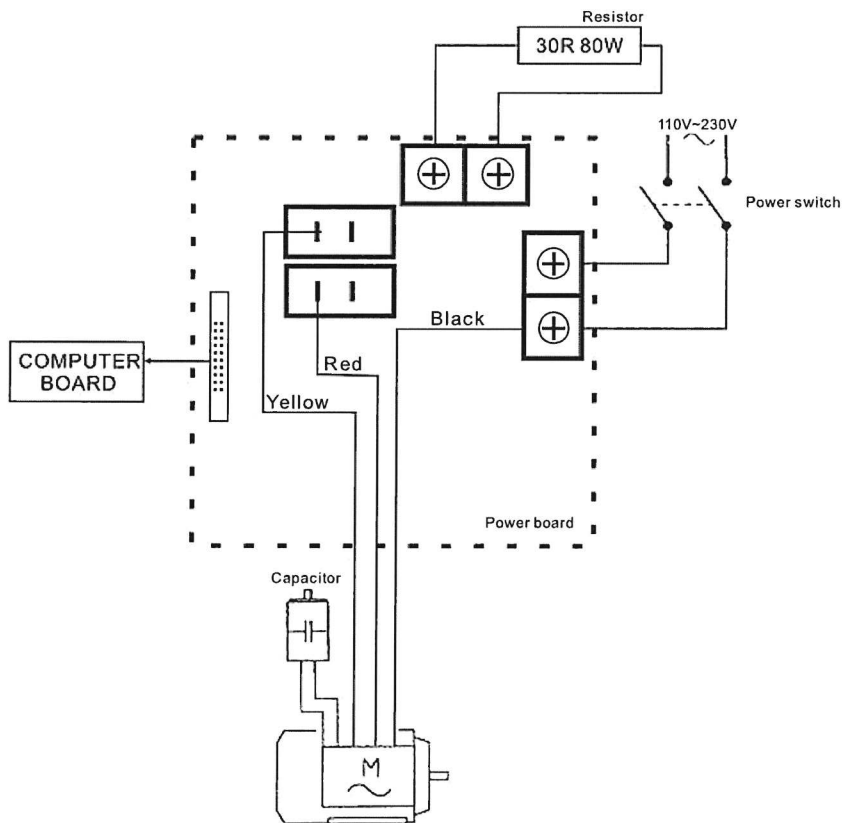


15. Exploded drawings and list

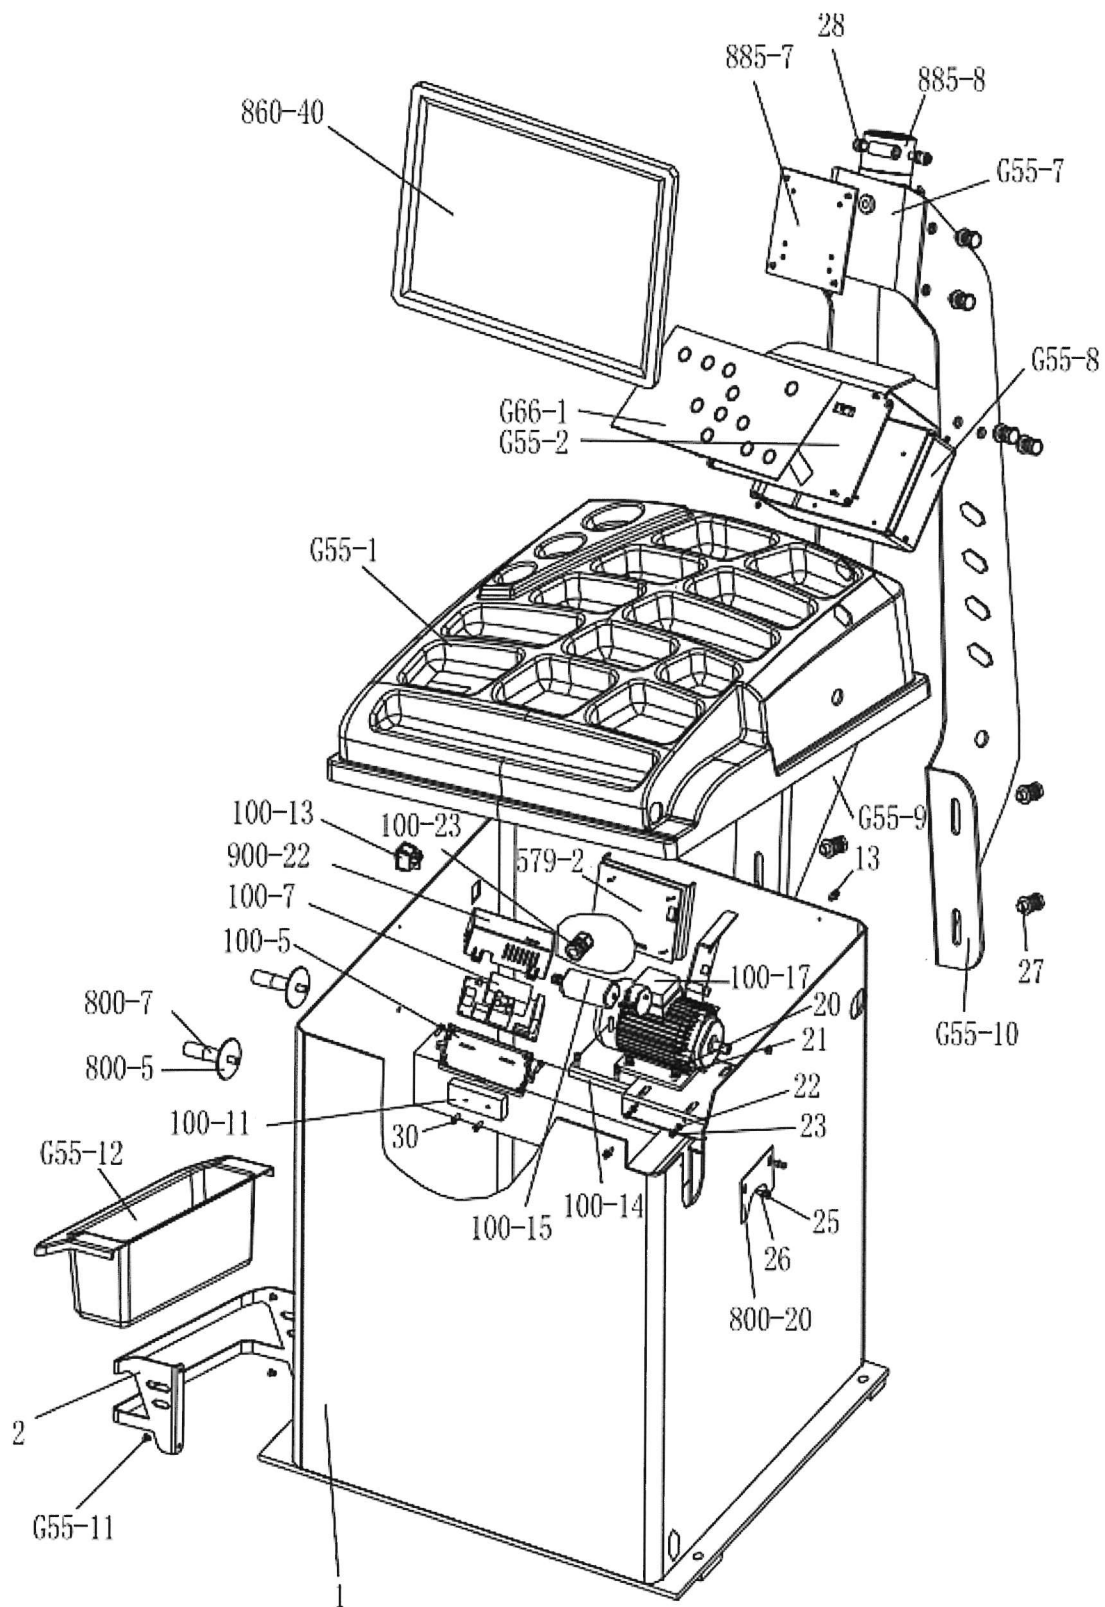


No.	Description	Specification	PLM Code
1	Machine body	G55	Optional
2	Screw	M6*12\White zinc	FJ19016000035
G55-11	Tools box bracket	G55	JZ20203100009
G55-12	Tools box	G55	JZ12001800086
G55-1	Head with tools-tray	G55	JZ12001800138
800-5	Tools hang washer	U100	JZ12001800038
800-7	Tools hang	U100	JZ12001800019
100-13	switch	KCD4\Medium size\green	DD12011000004
100-23	Power cable socket	PG13.5\black	DD02001000003
100-14	Motor adjust board	U100	JZ20203100023
100-17	Motor	240V/50HZ/0.24KW/1PH	JZ30303600116
579-2	Computer board	U579	JZ12300100134
20	Nut	M6\White zinc\Carbon steel	FJ21011000023
21	Flat washer	6*14*1.2\White zinc	FJ15006000095
22	Nut	M5\White zinc\Carbon steel	FJ21011000022
23	Outer hex bolt	M5*35\White zinc\8.8	FJ22012000073
800-20	Plate	U100	Optional
25	screw	M5*6\White zinc	FJ19024000007
13	Screw	M5*16\Turned black	FJ19018000007
G55-2	Key plate	G55*Wrinkles RAL9005	JZ20203400025
G66-1	Key board	G66*579 Software	JZ12300500046
885-7	support	U890E*Wrinkles RAL9005	JZ20203400033
885-8	Support cover	U890E*Wrinkles RAL9005	JZ20203400035
G55-7	Support	G55*Wrinkles RAL9005	JZ20203400038
G55-8	box	G55	JZ20203100115
G55-9	Support(B)	G55*Wrinkles RAL9005	JZ20203400037
G55-10	Support(A)	G55*Wrinkles RAL9005	JZ20203400036
27	Screw	M10*25\Turned black\8.8	FJ22012000010
28	Screw	M8*20\Turned black\8.8\Carbon steel	FJ22009000123
860-40	LCD screen	17inch\4:3\Dell	DD14005000006

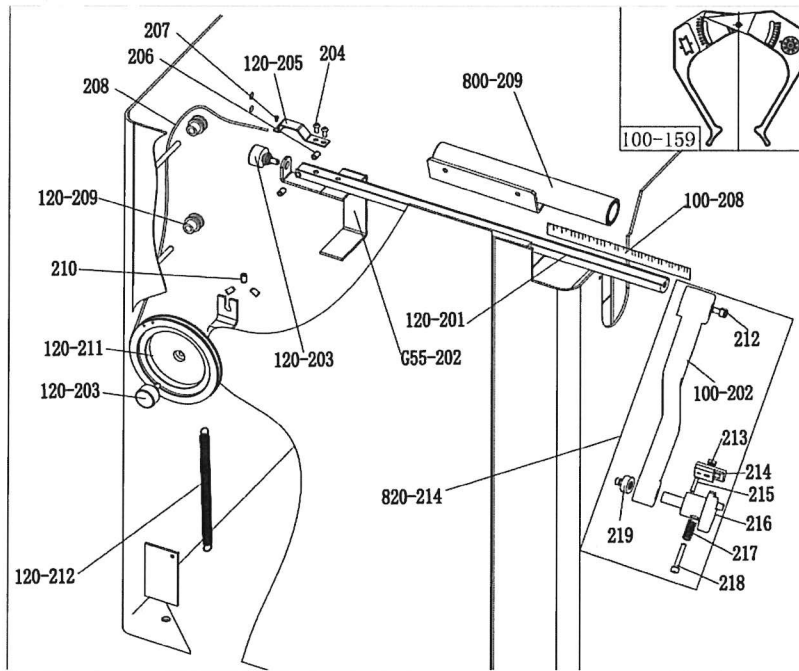

No.	Description	Specification	PLM Code
120-201	Rim Distance Gauge	U120	JZ20205100018
G55-202	Heavy	G55	JZ20203100011
120-203	Gauge sensor	RV24YNPY20S-B203\20K	DD21001000005
204	Screw	M5*10\Turned black	FJ19018000006
120-205	Caliper Hook	U120	JZ20203100045
206	Screw	M5*8\Turned black	FJ19006000009
207	Screw	PWT3*6*8\Colored Zinc	FJ19026000001
208	wirerope	Φ1	FJ30008000002
120-209	Pulley	U120	JZ12001800071
210	Screw	M6*8\Turned black	FJ19006000011
120-211	Bobbin winder pulley	U120	JZ12001800073
120-212	Spring	Medium diameterΦ9.2*Wire diameterΦ0.8*110	JZ11700200029
820-214	Handle Bar	U828	JZ30303600176
213	Screw	M6*16\Turned black\8.8\Carbon steel	FJ22009000093
100-202	Ruler handle	U579	JZ20205100034
214	Nut	M4\White zinc\Carbon steel	FJ21011000020
120-215	Clamping block	U828	JZ12001800064
216	Cylindrical pin	Φ3*L14\Original Color	FJ26005000001
120-217	Paste handle base	U828	JZ12001800067
120-218	Spring	L18*Medium diameterΦ7.5*Wire diameterΦ0.8	JZ11700300047
219	Screw	M4*25\Turned black\8.8	FJ22009000055
220	Screw	M5*10\Turned black	FJ19018000006
100-208	Graduated Strip	U822/860	JZ20205100026
100-59	Rim Distance Gauge	U100	JZ12001800065
800-209	Tape measure coupling	U820	JZ12001800082

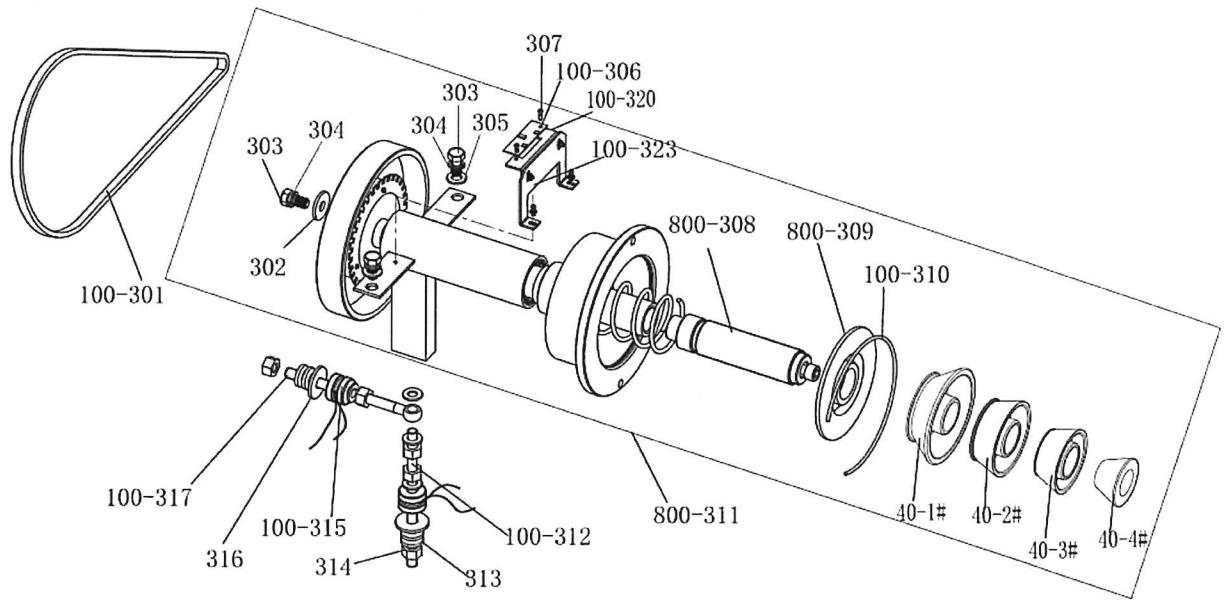


No.	Description	Specification	PLM Code
800-311	Complete Shaft	U900*340/Φ40/L200/Z64	JZ30303600056
800-308	Thread	U900	JZ20203000094
800-309	Plastic Lid	U100	JZ12000200128
100-310	Spring	Φ3*Φ148*L97	JZ11700400025
307	Screw	M3*6\Nickel plating	FJ19024000003
100-306	Position Pick-up Board	U100	JZ12300100126
302	Washer	10*30*3\White zinc\Carbon steel	FJ15006000010
303	Screw	M10*25\Turned black\8.8	FJ22014000001
304	Washer	10\Turned black\70#	FJ15004000002
305	Washer	10*20*2\White zinc\Carbon steel	FJ15006000006
100-312	Screw	U100	JZ20204600008
313	Washer	23*3\Turned black\65Mn	FJ15001000001
314	Nut	M10\Turned black	FJ21010000003
100-315	Sensor Assembly	Balancing machine used	DD18010000003
316	Washer	10*40*3\White zinc	FJ15006000012
100-317	Screw	U100	JZ20204600006
800-318	Spring	U100	JZ20203000003
100-301	Belt	380\J5	FJ05001000002
100-320	Photoelectric support	U100	JZ20204600016
40-1#	1# CONE	U900	JZ20204400021
40-2#	2# CONE	U900	JZ20204400022
40-3#	3# CONE	U900	JZ20204400023
40-4#	4# CONE	U900	JZ20204400020

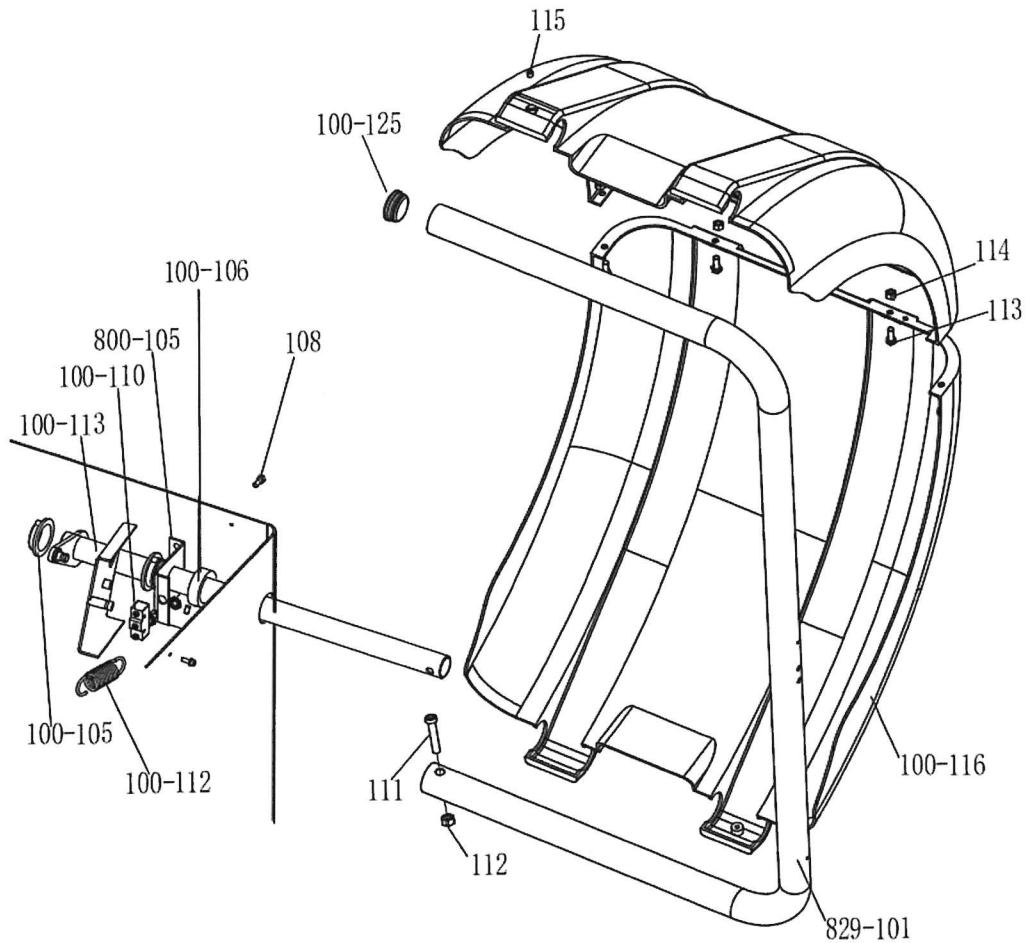


No.	Description	Specification	PLM Code
100-112	Spring	Medium diameter $\Phi 25$ *Wire diameter $\Phi 3.5$ *86	JZ11700200023
100-105	Sheath	U800	JZ12001800078
100-113	Shaft	U800*Wrinkles RAL9005	JZ20202800021
100-110	Micro switch	CM-1308N\Plastic material properties PA66	DD12007000001
800-105	Shaft support	U-800	JZ20202800010
100-106	Shaft sheath	U800	JZ12000200150
108	Screw	M8*20\Turned black\8.8	FJ19012000004
111	Screw	M10*45\Turned black\8.8	FJ22012000017
112	Nut	M10\White zinc\Carbon steel\9	FJ21003000001
829-101	Shaft	U829*Ordinary light RAL9005	JZ20203100145
113	Screw	M6*16\Turned black\8.8\Carbon steel	FJ22009000093
114	Nut	M6\White zinc\Carbon steel\9	FJ21003000013
115	Screw	M6*8\Turned black	FJ19006000011
100-116	Hood	U100	JZ12000200126
100-125	Hood	U100	JZ20202800036

Width measuring scale spare parts list

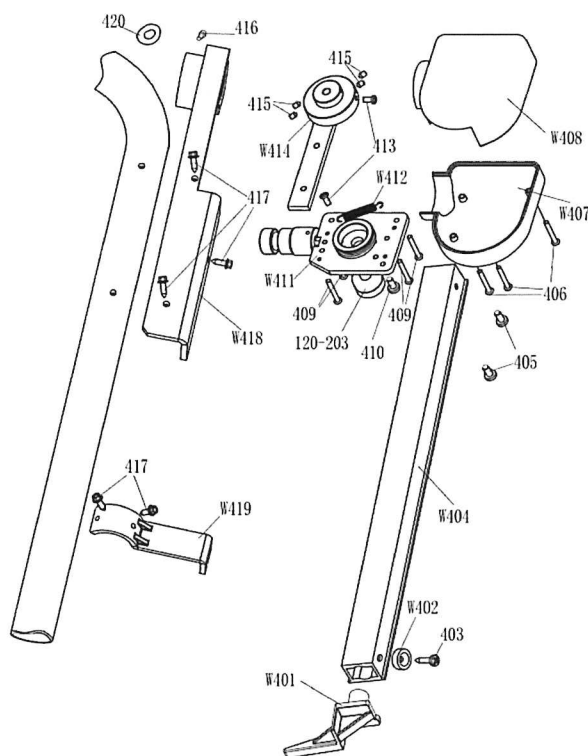





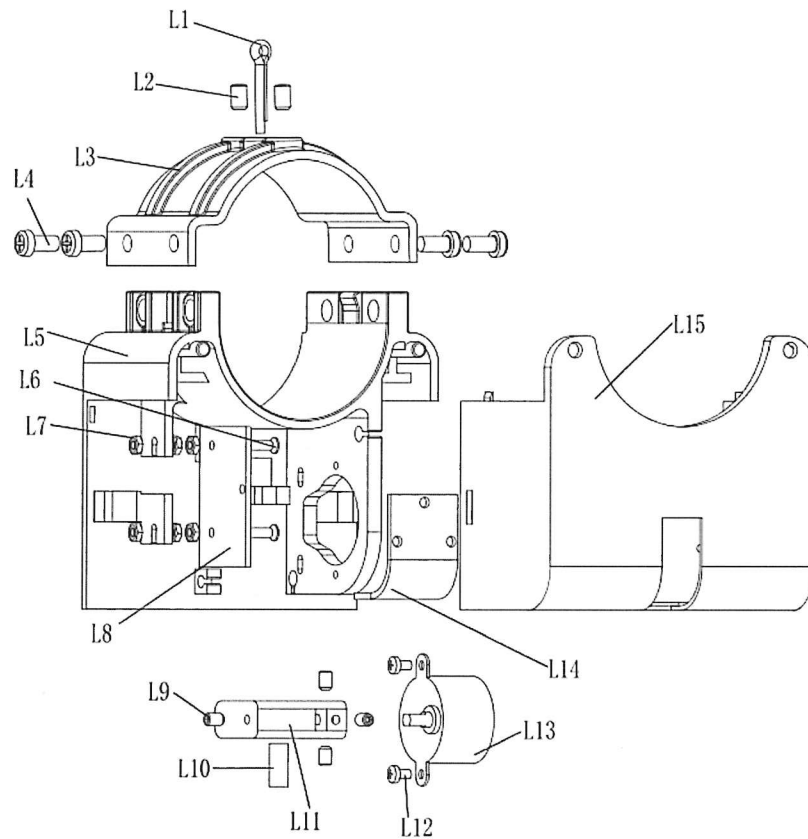









No.	Description	Specification	PLM Code
W401	Ruler head	U829	JZ12001800063
W402	Magnet	U829	JZ20203000099
403	Screw	ST3.5*16\Turned black	FJ19017000006
W404	Ruler seat	U829	JZ20203600016
405	Screw	M5*10\Turn black	FJ19018000006
406	Screw	ST4.2*25\White zinc	FJ19017000015
W407	Bottom cover	U829	JZ12000200139
W408	Top cover	U829	JZ12000200137
409	Screw	ST4.2*25\White zinc	FJ19017000015
410	Screw	M5*16\Turned black	FJ19018000007
120-203	Gauge sensor	RV24YNPY20S-B203\20K	DD21001000005
W411	Revolve shaft assembly	U829	JZ20203600003
W412	spring	Medium diameterΦ5.5*Wire diameterΦ0.9*28	JZ11700200028
413	Screw	M4*10\White zinc\4.8\Carbon steel	FJ19022000018
W414	Connection of arm assembly	U829	JZ20203600005
415	Screw	M4*6\White zinc	FJ19006000008
416	Screw	M6*16\Turned black\8.8\Carbon steel	FJ22009000093
417	Screw	ST4.8*16\Turned black\8.8	FJ19005000001
W418	Installation board assembly	U829	JZ20203600007
W419	Locating plate	U829	JZ20203100083
420	O-ring	Φ14\black	CF03002000004

Laser Version Exploded drawings and spare parts list



No.	Description	Specification	PLM Code
L1	cotter pin	Φ 4*L12\Turn black	FJ26002000014
L2	Screw	M5*8\Turn black	FJ19006000009
L3	Laser cover	U579	JZ12000200149
L4	Laser mounting base	U579	JZ12001800044
L5	Screw	M5*10\Turn black	FJ19018000006
L6	Screw	M3*16\White zinc\6.8	FJ19016000045
L7	Nut	M3\White zinc\Carbon steel	FJ21011000019
L8	Controller	U579	JZ12300100129
L9	Screw	M4*6\White zinc	FJ19006000008
L10	Laser	\XH2.54-T\Φ 6\5\100mm	DD17008000001
L11	Laser fixed block	U579	JZ12001800045
L12	Screw	PWT3*6*8\Colored Zinc	FJ19024000003
L13	motor	28YBJ-48/5V	DD01001000034
L14	Glass	U800	JZ20203900082
L15	Box	U579	JZ12000200167

Accessories list

CODE	ITEM	QTY	PHOTO	
JZ20204400021	1# CONE	1		φ40
JZ20204400022	2# CONE	1		φ40
JZ20204400023	3# CONE	1		φ40
JZ20204400020	4# CONE	1		φ40
JZ30303600004	COMPLETE QUICK RELEASE NUT	1		φ40
JZ20203000094	THREADED SHAFT	1		Tr40
JZ20204400020	WRENCH	1		
GF29009000001	HEX WRENCH	1		
GF29009000003	HEX WRENCH	1		
JZ20204800001	STANDARD WEIGHTS 100G	1		
JZ12001800065	CALIPER	1		
JZ11801300051	PLIER	1		
JZ12000200138	PLASTIC LID	1		
JZ20204500036	RUBBER BUFFER	1		

Attach figure 1

System circuit diagram

